

85*119mm

80g铜版纸, 风琴折, 双面印刷, 4C印刷, 油墨光

2024.10.08

2025.04.29改电话

XIBERIN

DM02双金标版
使用说明书

www.xiberia.net

产品概述

1	音量+按键
2	MFB按键
3	音量-按键
4	电源按键
5	ANC按键

蓝牙配对名称: XIBERIA DM02 双金标版

包装内含:耳机*1、数据线*1、转接头*1、说明书* 1

开机/关机

在关机状态下, 长按电源按键3s开机。
在开机状态下, 长按电源按键3s关机。

开机后:
指示灯绿灯长亮1s, 后进入红灯灯闪烁状态(未连接)或绿灯10s闪一次(已连接)。

关机后:
指示灯红灯长亮1s后熄灭(所有灯光熄灭)。

配对/连接

1. 自动回连:开机自动搜索已连接过的设备。
2. 强制配对:在关机状态下, 长按电源按键5s直接进入强制配对状态(不进行自动回连)。
3. 中断连接:设备已连接时, 从手机端断开连接, 进入强制配对(耳机灯被搜索)。
4. 清除配对:在开机状态下, 5s电源按键, 后耳机自动关机, 需手动重启(耳机删除配对记录, 所有回连失效)。

注: 一拖二功能需在配对状态下, 连接A设备之后, 断开A设备的连接, 再连接B设备, 而后再接入设备, 即可实现一拖二功能。

模式切换

音效切换
在已连接状态下, 双击 MFB 按键进行模式切换。顺序为: 音乐模式 > 游戏模式 > 影院模式。并在此之间循环切换。出厂默认为音乐模式。

ANC与通透模式开关
1. 耳机开机时:在开机状态下, 单击ANC按键, 开启ANC降噪模式。模式间连续切换依次为:降噪模式>通透模式>降噪模式>通透模式(循环切换)。(出厂默认为降噪降噪)
2. 耳机开机时:在开机状态下, 单击ANC按键, 开启ANC降噪模式。模式间连续切换依次为:降噪模式>通透模式>降噪模式>通透模式(循环切换)。(出厂默认为降噪降噪)

低延迟模式/常规模式
在开机状态下, 长按ANC按键2s, 循环切换低延迟模式与常规模式。出厂默认为常规模式。

按键说明

播放/暂停
在连接状态下, 单击MFB按键可播放音乐。再次单击可暂停播放。

上一曲/音量-
1. 连接播放音乐状态下, 双击音量-键 (0.5s内完成) 切换至上一曲。
2. 单击音量-键音量减少; 长按音量-键一直减少, 直至最小音量 (“嘟嘟”提示音)。

下一曲/音量+
1. 连接播放音乐状态下, 双击音量+键 (0.5s内完成) 切换至下一曲。
2. 单击音量+键音量增加; 长按音量+键一直增大, 直至最大音量 (“嘟嘟”提示音)。

接听/挂断
1. 在待机状态下, 单击MFB按键, 可接听来电。
2. 在通话状态下, 长按MFB按键至 “嘟嘟” 声, 可挂断来电。

拒接来电
在待机状态下, 长按MFB按键至 “嘟嘟” 声, 可拒接来电。

充电说明

输入: 5V=1A

充电时 充满电后 低电提示

电量提示
当设备在充电状态时, 红灯常亮; 当设备满电时, 绿灯常亮。当设备处于低电状态时, 红灯每 1 秒闪烁两次, 每 10 分钟持续提示音 “电量低, 请充电”。

参数信息

产品型号: DM02 双金标版	驱动单元: ø40mm动圈
连接模式: 蓝牙、Type-C有线	单元阻抗: 32Ω±15%
蓝牙协议: HFP、A2DP、AVRCP	频率范围: 20Hz-20kHz
音频解码: SBC、AAC、LHDC	灵敏度: 95dB±3dB
蓝牙距离: 约10米	额定输入: 5V=1A

设备常见故障排除与维修		
故障现象	检查内容	故障排除
喇叭断续	检查设备是否连接正常	重新连接
	检查音源质量是否正常	更换播放音源
喇叭无声或连接无反应	检查设备是否连接正常	重新连接
	检查设备音量是否关闭	开启音量开关
喇叭电声清	检查音源质量是否正常	更换播放音源
	MIC无声	检查设备MIC是否关闭

产品序列号 (填写)

产品序列号	
产品型号	
产品颜色	
用户姓名	
联系电话	
购机日期	

产品合格证

批号: _____

品管: _____

扫码下载官方APP

扫码关注微信公众号

东莞市德声实业有限公司 出品

地址: 广东省东莞市石排镇石洲大道233号1号楼101室

咨询服务电话: 400-966-0139

XIBERIN

DM02 双金标版
instruction manual

www.xiberia.net

Product Overview

1	Volume + button
2	MFB button
3	Volume - button
4	Power button
5	ANC button

Bluetooth Pairing Name: XIBERIA DM02 双金标版

Package includes: earphone*1, data cable*1, adapter*1, manual* 1

Power on/off

In the off state, long press the power button for 3s to turn on the power.
In the on state, long press the power button for 3s to turn off the power.

Power on paired state Shutdown/ Connection Success

After power on:
Indicator light green light long 1s, then enter the red and green light flashing s tate (not connected) or green light 10s flash once (connected).
After shutting down:
Indicator red light will be on for 1s and then turn off (all lights are off).

Pairing/Connecting

1. Auto-connect: automatically search for the connected devices when power on.
2. Forced Pairing: In the power off state, long press the power button 5s to enter the forced pairing state directly (without automatic reconnection).
In the power off state, when the pairing list is empty, long press the power button 5s to enter the pairing state.
3. Interrupt connection: When the device is already connected, disconnect it from the cell phone and enter into forced pairing (the headset can be searched).
4. clear pairing: In the boot state, 5H the power button, after the headset automatically shut down, you need to restart manually. (The headset deletes the pairing record, all back to the connection is invalid).

Note: The one-two function needs to be in the pairing state, after connecting the A device, disconnect the A device, then connect the B device, and then reconnect the A device, you can realize the two-two function.

Mode switching

Sound Switching
In the connected state, double-click the MFB button to switch modes. The sequence is Music Mode/Game Mode/Theater Mode and cycles between these. Factory default is music mode.

ANC with pass-through mode switch
1. when the headset is turned on; in the boot state, click the ANC button, open the ANC noise reduction mode. mode order switching (in turn: depth noise reduction / comfortable noise reduction / wind noise / ambient sound / noise reduction off (cycle switching). (Factory default is deep noise reduction)
2. Power off status, long press the ANC button for 2s to turn on and turn off the ANC. Click the ANC button to switch the depth noise reduction and ambient sound. Depth noise reduction indicates red and green indicator for ambient sound.

Low Latency Mode / Regular Mode
In the power-on state, long press the ANC button for 2s to cycle between low latency mode and regular mode. The first time you turn on the power, Factory default is normal mode.

Key Description

Play/Pause
In the connected state, click the MFB button to play the music and click again to pause the playback.

Previous Song/Volume-
1. Connect to play music state, double click the volume+ key (completed within 0.5s) to switch to the previous song.
2. Click the volume- key volume reduction; long press the volume- key has been reduced until the minimum volume.

Next Song/Volume+
1. Connect to play music state, double-click the volume+ key (completed within 0.5s) to switch to the next song.
2. click the volume+ key volume increase; long press the volume+ key has been increased until the maximum volume (“du du” tone).

Answer/Hang UP
1. In ringing state, click MFB button to answer the incoming call.
2. In call status, long press MFB button until “du du” sound, you can hang up the call.

Refuse to Accept a Call
In the ringing state, press and hold the MFB button until it “du” to reject the call.

Charging

Input: 5V=1A

Charging Fully Charged Low Battery

Battery Level Indication
When the device is in charging state, the red light is always on; when the device is fully charged, the green light is always on. When the device is in a low power state, the red light flashes twice every 1 second, and a deep “电量低, 请充电” is broadcast every 10 minutes.

Parametric Information

Product Model: DM02 双金标版	Speaker Unit: ø40mm动圈
Connection Mode: Bluetooth、Type-C	Speaker Impedance: 32Ω±15%
Bluetooth Protocol: HFP、A2DP、AVRCP	Frequency Response Range: 20Hz-20kHz
Audio Decoding: SBC、AAC、LHDC	Sensitivity: 95dB±3dB
Bluetooth Distance: Approx 10 m	Rated Input: 5V=1A

Troubleshooting and repair of common equipment problems		
Failure Phenomenon	Inspection Content	Fault Resolution
Loudspeaker breaks	Check if the device is connected properly	Reconnect
	Check that the audio quality is normal	Replacing the playback audio source
No sound from speakers or unresponsive connection	Check if the device is connected properly	Reconnect
	Check that device volume is off	Turn on the volume switch
Speaker current sound	Check that the audio quality is normal	Replacing the playback audio source
MIC noiselessly	Check that device MIC is off	Turn on MIC of the device

注意事项

1.使用产品前请仔细阅读本使用说明书并妥善保管。
2.首次使用时, 请充满电。
3.如本产品长期不用, 请取出电池, 并定期充电。
4.必须选择正规厂家生产并经国家认证的产品。
5.若手机无法搜索蓝牙耳机, 请确认蓝牙耳机是否处于“配对模式”, 若长时间未进行配对或连接, 蓝牙耳机5分钟后会自动关机, 请根据使用说明书的指示重新开机。

Something to watch out
1. Please read this instruction manual carefully before using the product and keep it in a safe place.
2. When using the product for the first time, please fully charge it first.
3. If the product is not used for a long time (more than 2 weeks), please charge it.
4. You must choose the charger produced by the regular manufacturers and after the national 3C certification.
5. If your cell phone can not search for the Bluetooth headset, please make sure the Bluetooth headset is in “pairing mode”. If there is no pairing or connection for a long time, the Bluetooth headset will be automatically shut down after 5 minutes, please follow the instructions in the manual to reboot.

警告
-请勿以任何理由拆卸、维修或改装耳机。
-请勿将电池拆卸、投入火中、短路与水正负极、泡水。
-请勿将产品置于温度过高(超过20℃以下或60℃以上)环境中。
-请勿将产品置于潮湿、有水或液体环境中。
-请勿将产品置于高温、有腐蚀性液体、有腐蚀性气体、有腐蚀性物质的环境中。
-请勿将产品置于高温、有腐蚀性液体、有腐蚀性气体、有腐蚀性物质的环境中。
-请勿将产品置于高温、有腐蚀性液体、有腐蚀性气体、有腐蚀性物质的环境中。

Warning
-Do not disassemble, repair or modify the headset for any reason.
-Do not disassemble the battery, put it into fire, short-circuit the positive and negative battery terminals, or soak it in water.
-Do not expose the product to temperatures too low or too high (Below -20°C or above 60°C).
-Please avoid placing the product indicator near the eyes of children or animals.
NOTE: Prolonged use of the headphones may cause hearing damage, please rationalize the use of time.

保修说明

请妥善保管保修卡及有效购买凭证, 于产品故障送修时一并出示, 若您无法提供保修卡 (需加盖公章) 或相关购买凭证, 则产品保修期起算日将以产品上出厂日期为准。

服务条例

1. 咨询服务: 用户在使用过程中遇到任何问题, 若线上购买可直接咨询店铺在线客服, 均可致电: 400 966 0139 咨询。

2. 质保服务: 产品自售出之日起, 在正常使用情况下, 若产品出现品质故障, 用户可在购买7天内退换货, 15天内请换新, 一年内免费保修的服务。

若属于下列原因, 恕不提供包换/保修服务:

(1). 不能出示有效保修卡原件和有效发票或收据, 或者机身条码损毁。

(2). 购买产品日期、销售单位名称 (盖章有效) 等项目未能完整填写或涂改保修卡。

(3). 一切人为因素损坏, 包括非正常工作环境下使用所导致的故障和破坏。

(4). 未经许可对产品进行改造、分解、组装或维修而发生的故障。

(5). 产品缺少配件, 如无产品质保贴及产品相关配件等。

(6). 除正常使用所产生的电器性能故障外, 如外观损坏, 只享受维修服务。

注: 此保修服务不包括运输费用及不提供上门服务。

本保修卡最终解释权归东莞市德声实业有限公司