

85*119mm

80g铜版纸, 风琴折, 双面印刷, 4C印刷, 油墨光

XIBERIA

DM25
使用说明书

www.xiberia.net

产品概述

1 功能拨动杆

2 电源指示灯

3 麦克风孔

4 充电口

1	功能拨动杆
2	电源指示灯
3	麦克风孔
4	充电口

蓝牙配对名称: XIBERIA DM25

开机/关机

开机

往上(ON印字方向)拨动杆长按3秒开机。电源指示灯蓝灯亮1秒;
首次连接: 进入配对状态。红蓝灯交替闪, 语音播报提示音;
回连状态: 蓝灯1秒闪一次, 语音播报提示音;
注意: 开机后如因没关将自动进入配对状态。红蓝灯交替闪;
10分钟后配对或回连失败, 耳机将会自动关机。

关机

往下(OFF印字方向)拨动杆长按3秒关机。电源指示灯
红灯亮1s, 指示灯熄灭。

配对/连接

配对状态

连接成功

红蓝灯交替闪烁

蓝灯1秒亮1秒

1. 启动回连: 开机后自动搜索已连接过的设备。

2. 强制配对: 在关机状态下, 往上(ON印字方向)拨动杆长按5秒直接进入强制配对状态
(不进行自动回连)。

3. 中断连接: 设备已经连接时, 从手机端断开连接, 进入强制配对(耳机可被搜索)。

4. 清除配对: 在配对状态时往上 (ON 印字方向) 拨动杆连续按 5 下 (2秒内完成)
后耳机提示 “嘟嘟” 声两声, 需手动重置(耳机删除配对记录,
所有回连失败)。

注: 一拖二功能需在配对状态下, 连接A设备之后, 断开A设备的连接, 再连接B设备,
而后再接入A设备, 即可实现一拖二功能。

模式切换

通透模式/常规模式

往下 (OFF 印字方向) 连续拨动两下循环切换
通透模式与常规模式。
提示音: 通透模式/常规模式

低延时模式/常规模式

往上 (ON 印字方向) 连续拨动两下循环切换
低延时模式与常规模式。
提示音: 低延时模式/常规模式

开机状态下默认为蓝牙低延时模式。

来电/音量操作

接听/挂断/拒接 (来电时)

1. 往上 (ON 印字方向) 拨动杆按一下接听电话;
2. 往下 (OFF 印字方向) 拨动杆按一下挂断电话;
3. 往下 (OFF 印字方向) 拨动杆长按1.5秒拒接电话。

音量加減 (播放音频)

1. 往上 (ON 印字方向) 每按一下拨动杆音量增加;
(听到 “嘟嘟” 声后表示已到最大音量)
2. 往下 (OFF 印字方向) 每按一下拨动杆音量减小。

充电说明

输入: 5V=1A

充电中

充满电后

低电提示

电量提示

当设备在充电状态时, 红灯常亮; 当设备充满电时, 蓝灯常亮。当设备处于低电量状态时,
每10分钟红灯连闪两次同时播报提示音 “电量低, 请充电”。

参数信息

产品名称	头戴蓝牙耳机
产品型号	DM25
喇叭单元	30mm
输入充电标准	USB-A, DC5V=1A
连接距离	约10米

常见问题

解决方案

无法开机

1. 重新给耳机充电;
2. 尝试将耳机重新开机。

无法连接

1. 重新进入配对状态;
2. 对照说明书操作部分重新操作

声音嘈杂

取下耳机重新确认佩戴方向

操作不实现

1. 尝试重新开机;
2. 对照说明书操作部分重新操作

无法充电

1. 用附送的充电线连接充电;
2. 检查充电口连接是否牢固

产品序列号 (填写)

产品序列号

产品型号

产品颜色

用户姓名

联系电话

购机日期

产品合格证

批号: _____

品管: _____

东莞市德声实业有限公司 出品

地址: 广东省东莞市石排镇石洲大道233号1号楼101室

咨询电话: 400-966-0139

XIBERIA

DM25
instruction manual

www.xiberia.net

Product Overviews

1 Function toggle

2 Power indicator light

3 Microphone plug hole

4 Charging port

1	Function toggle
2	Power indicator light
3	Microphone plug hole
4	Charging port

Bluetooth Pairing Name: XIBERIA DM25

Power on/off

Power on:

Upward (ON printing direction) toggle lever long toggle 3 S to power on, power indicator blue light 1 second;
First connection: enter pairing state, red and blue lights flash alternately, voice broadcasting beeps;
Back to the connection state, the blue light flashes once a second, the voice broadcasts a prompt tone;
Note: After powering on the headset, if it fails to connect back, it will automatically enter the pairing state, with red and blue lights flashing alternately. After 10 minutes of failed pairing or reconnection, the headset will turn off automatically.

Power off:

Down (OFF printing direction) toggle lever long toggle 5 S to turn off the machine, power indicator red light on 1S, indicator off.

Pairing/Connecting

Paired status

Connection successful

Red and blue light alternately flashing

Blue light on for 1 S in 10 S

1. Auto-connect: automatically search for the connected devices.

2. Forced pairing: In the off state, upward (ON printing direction) toggle lever long toggle 5 seconds directly into the forced pairing state (not automatically back to connect).

3. Interrupt the connector: when the device is already connected, disconnect from the cell phone to enter the forced pairing (headset can be searched).

4. Clear pairing: in the pairing state up (ON printing direction) toggle lever continuously dial 5 (completed within 2 seconds) after the headset prompts "beep" sound and then shut down, you need to manually reboot (the headset deletes the pairing record, all the back to the connection is invalid).

Note: The one-two function needs to be in the pairing state, after connecting the A device, disconnect the A device, then connect the B device, and then reconnect the A device, you can realize the two-two function.

Mode switching

Translucent Mode/Normal Mode

Toggle down (OFF printing direction) two consecutive times to cycle between Transparency and Normal modes.
Tone: Transparent mode / Normal mode

Low Latency Mode / Regular Mode

Toggle up (in the direction of ON printing) two consecutive times to cycle between low delay mode and normal mode.
Tone: Low Delay Mode/Normal Mode
Defaults to Bluetooth Low Latency Off in the power-on state.

Incoming call/volume operation

Answer/hang up/reject (on incoming calls)

1. Toggle the jog dial upwards (in the direction of the ON imprint) to answer the call;
2. down (OFF printing direction) toggle lever long dial 1.5 S to reject the call.

Volume up and down (playing audio)

1. up (ON printing direction) each toggle lever volume increases; (When you hear a "beep" sound, it means that the volume has reached the maximum)
2. Downward (OFF printing direction) each toggle lever volume decreases.

Charging

Input: 5V=1A

Charging

Fully Charged

Low Battery

Battery Level Indication

When the device is in charging state, the red light is always on; when the device is fully charged, the blue light is always on; when the device is in low power state, the red light flashes twice every 10 minutes while announcing the beep "low power, please charge"

Parametric Information

Pseudolaric acid	Bluetooth wireless headset
Product Model	DM25
Speaker unit	30mm
Charging standard	USB-A, DC5V=1A
Connecting distance	About 10 M

Problems

Method settle an issue

Unable boot up

1.Recharge the headset;
2.Try to turn the headset back on.

Connectionless

1.Re-enter the pairing state;
2.ensure that the distance between the headset and the connected device does not exceed 10 M.

Voice disruption

Remove the headset to reconfirm wearing direction.

Operation not realized

1.Try to reboot;
2.Re-operate against the operation part of the manual.

Unable to recharge

1.Connect the charging with the attached charging cable;
2.Check whether the charging port is firmly connected.

温馨提示

1. 请勿以任何理由拆除或修改耳机;
2. 请勿长时间、高音量佩戴耳机, 可能会对您的听力造成损伤;
3. 请勿将产品置于温度过低或过高 (0℃以下或45℃以上) 环境下;
4. 如果电池更换不当会有爆炸危险;
5. 请勿尝试拆开或改装耳机的电池, 否则会导致电池爆炸或电池内液体泄漏, 非我司指定的电池或经过拆卸和改装的电池不在保修范围之内。

Please note

1. Please do not remove or repair modified headphones for any reason;
2. Please do not use the headset for a long time and at high volume, it may cause damage to your hearing;
3. Please do not put the product in too low or too high temperature (below 0 °C or above 45 °C) environment;
4. If the battery is not replaced properly there is a risk of explosion;
5. Do not attempt to replace the internal rechargeable lithium-ion battery.
Please contact the Customer Support Center for original replacement;
6. Do not attempt to disassemble or modify the headset's battery.
Otherwise, it may lead to battery explosion or liquid leakage inside the battery.
Batteries not specified by our company or batteries that have been disassembled and modified are not covered by the warranty.

保修说明

请妥善保管保修卡及有效购买凭证, 于产品故障送修时一并出示, 若您无法提供保修卡或相关购机凭证, 则产品保修期起算日将以产品上的出厂日期为准。

服务条例

1. 咨询服务: 用户在使用过程中遇到任何问题, 若线上购买可直接咨询店铺在线客服, 均可致电: 400 966 0139 咨询;
2. 质保服务: 产品自售出日起, 在正常使用情况下, 若产品出现品质故障, 用户可在购买7天内申请退货, 15天内申请换货, 一年内免费保修的服务。
若属于下列原因, 恕不提供包换/保修服务:
1. 不能出示有效保修卡原件和有效发票或收据。
2. 购买产品日期、销售单位名称 (盖章有效) 等项目未能完整填写或涂改保修卡。
3. 一切人为因素损坏, 包括非正常工作环境下使用所导致的故障和破坏。
4. 未经许可对产品进行改造、分解、组装或维修而发生的故障。
5. 产品缺少配件, 如无产品质保贴及产品相关配件等。
6. 除正常使用所产生的电性能故障外, 如果外观损坏, 只享受维修服务。
注: 此保修服务不包括运费费用及不提供上门服务。
本保修卡最终解释权归东莞市德声实业有限公司